


Power Distribution Units AP9560 & AP9561


AP9560 and AP9561 are 30-amp Rack-mount Power Distribution Units (PDUs) that provide 120-volt or 208-volt power to rack-mount equipment.

AP9560

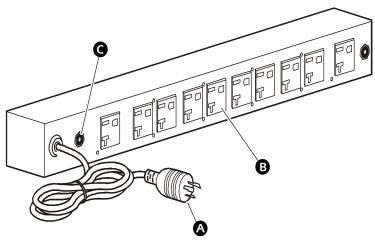

- **1**2-foot NEMA L5-30 Power Cord
- **B** NEMA 5-20 Outlets (10)
- **6** 15-amp Circuit Breakers (2)

AP9561

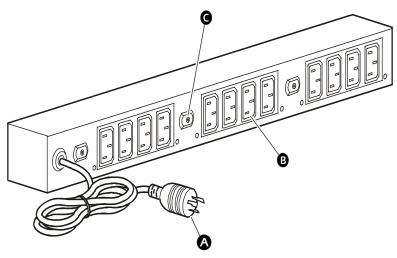

- **A** 12-foot NEMA L6-30 Power Cord
- **B** IEC-320-C13 Outlets (12)
- **6** 10-amp Circuit Breakers (3)

Safety and Grounding


Please read the following information before installing or operating your APC Power Distribution Unit (PDU):

- This PDU is intended for indoor use only.
- Do not install this PDU where excessive moisture or heat is present.
- Never install any wiring, equipment, or PDUs during a lightning storm.
- Plug this PDU into a three-wire, grounded power outlet only. The power outlet must be connected to appropriate branch circuit/mains protection (fuse or circuit breaker). Connection to any other type of power outlet may result in a shock hazard.
- Use only the supplied brackets for mounting.
- Do not use extension cords or adapters with this PDU.
- Do not work alone under hazardous conditions.
- Check that the power cord, plug, and socket are in good condition.
- To reduce the risk of electric shock when grounding cannot be verified, disconnect the PDU from the power outlet before installing or connecting equipment. Reconnect to the power outlet only after making all connections.
- Equipment must have a protective earth connector which carries the leakage current from the load devices (computer equipment). Do not exceed a total leakage current of 3.5 mA.


Installation

Horizontal Mounting (Any standard EIA-310 rack or enclosure)

1 Attach the horizontal-mounting brackets to the PDU.

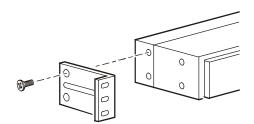


2 Install the PDU using hardware included with your rack or enclosure. The PDU will occupy 1 U-space.

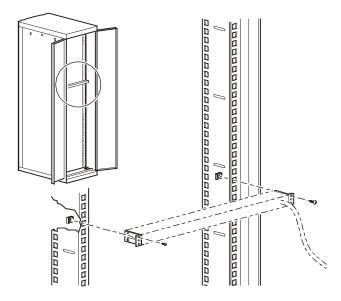



Vertical Mounting (Any standard EIA-310 rack or enclosure)

1 Attach the vertical-mounting brackets to the PDU.

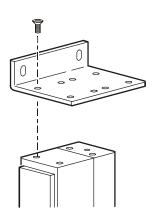

2 Install the PDU on a vertical mounting rail in your rack or enclosure.

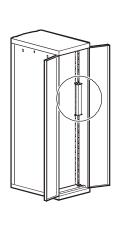

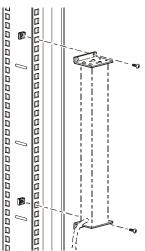

Specifications

Electrical			
Input voltage range	AP9560: 100-120V	AP9561: 200-240V	
Max. current draw	AP9560: 24 A	AP9561: 24 A	
Compliance			
Safety	UL/cUL Listed; UL1950		
Physical			
Size (h×w×d)	17.6×1.75×2.25 in (44.7×4.45×5.72 cm)		
Shipping size (h×w×d)	19.12×6.0×6.95 in (48.6×15.2×17.65 cm)		
Weight	5.5lb (2.5kg)		
Shipping weight	8.0lb (3.6kg)		
Environmental			
Elevation (above MSL)	Operating: 0–10,000 ft (0–3000 m) Storage: 0–50,000 ft (0–15000 m)		
Relative Humidity	Operating: 0 to 95%, non-condensing Storage: 0 to 95%, non-condensing		
Temperature	Operating: 32 to 113°F (0 to 45°C) Storage: -13 to 149°F (-25 to 65°C)		

Warranty

Limited warranty

APC warrants the PDU to be free from defects in materials and workmanship for a period of 2 years from the date of purchase. Its obligation under this warranty is limited to repairing or replacing, at its own sole option, any such defective products. This warranty does not apply to equipment that has been damaged by accident, negligence, or misapplication or has been altered or modified in any way. This warranty applies only to the original purchaser.

Warranty limitations

Except as provided herein, APC makes no warranties, express or implied, including warranties of merchantability and fitness for a particular purpose. Some jurisdictions do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

Except as provided above, in no event will APC be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of this product, even if advised of the possibility of such damage.

Specifically, APC is not liable for any costs, such as lost profits or revenue, loss of equipment, loss of use of equipment, loss of software, loss of data, costs of substitutes, claims by third parties, or otherwise. This warranty gives you specific legal rights and you may also have other rights, which vary according to jurisdiction.

Life-Support Policy

General policy

American Power Conversion (APC) does not recommend the use of any of its products in the following situations:

- In life-support applications where failure or malfunction of the APC product can be reasonably expected to cause failure of the lifesupport device or to affect significantly its safety or effectiveness.
- In direct patient care.

APC will not knowingly sell its products for use in such applications unless it receives in writing assurances satisfactory to APC that (a) the risks of injury or damage have been minimized, (b) the customer assumes all such risks, and (c) the liability of American Power Conversion is adequately protected under the circumstances.

Examples of life-support devices

The term *life-support device* includes but is not limited to neonatal oxygen analyzers, nerve stimulators (whether used for anesthesia, pain relief, or other purposes), autotransfusion devices, blood pumps, defibrillators, arrhythmia detectors and alarms, pacemakers, hemodialysis systems, peritoneal dialysis systems, neonatal ventilator incubators, ventilators (for adults and infants), anesthesia ventilators, infusion pumps, and any other devices designated as "critical" by the U.S. FDA.

Hospital-grade wiring devices and leakage current protection may be ordered as options on many APC UPS systems. APC does not claim that units with these modifications are certified or listed as hospital-grade by APC or any other organization. Therefore these units do not meet the requirements for use in direct patient care.

APC Worldwide Customer Support

Customer support for this or any other APC product is available at no charge in any of the following ways:

- Visit the APC Web site to find answers to frequently asked questions (FAQs), to
 access documents in the APC Knowledge Base, and to submit customer support
 requests.
 - www.apc.com (Corporate Headquarters)

Connect to localized APC Web sites for specific countries, each of which provides customer support information.

- www.apc.com/support/
 - Global support with FAQs, knowledge base, and e-support.
- Contact an APC Customer Support center by telephone or e-mail.
 - Regional centers:

APC headquarters U.S., Canada	(1)(800)800-4272 (toll free)	
Latin America	(1)(401)789-5735 (USA)	
Europe, Middle East, Africa	(353)(91)702020 (Ireland)	
Japan	(03)5434-2021 Guidance 3	

 Local, country-specific centers: go to www.apc.com/support/contact for contact information.

Contact the APC representative or other distributor from whom you purchased your APC product for information on how to obtain local customer support.



990-1202A 08/2002